 
 




Dimensions

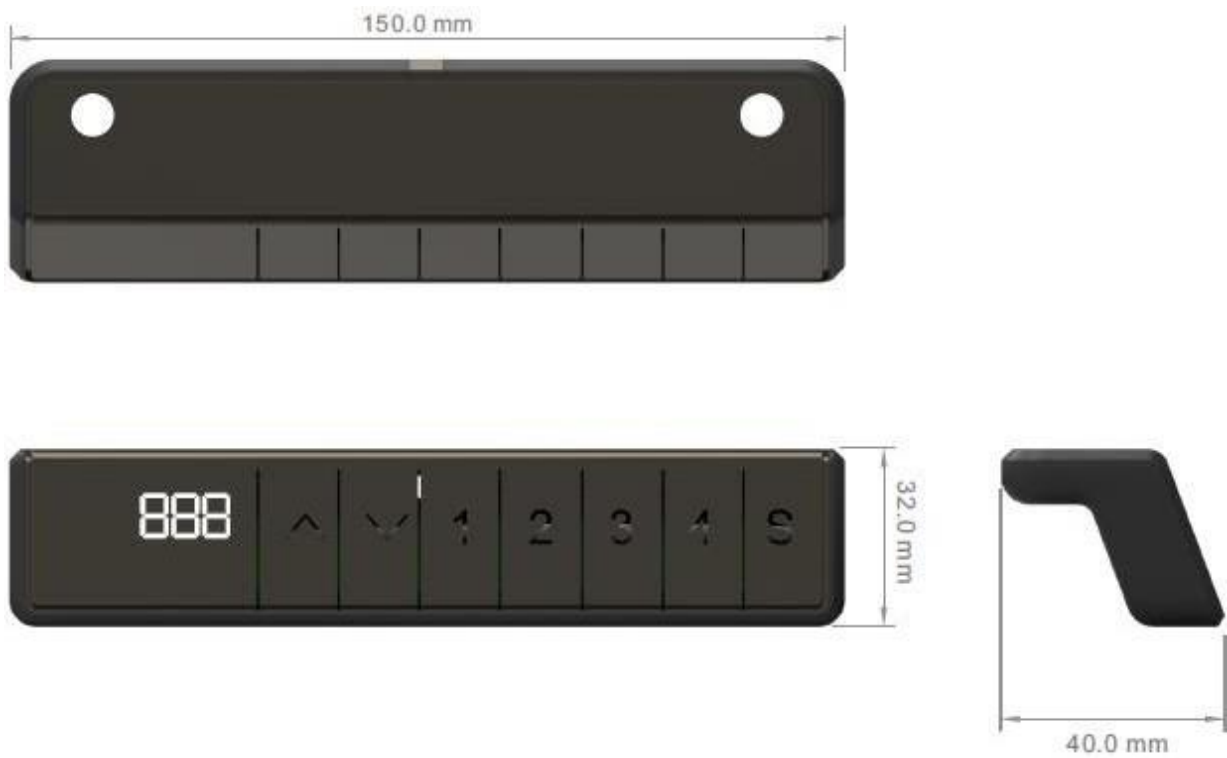

User Interface Guide

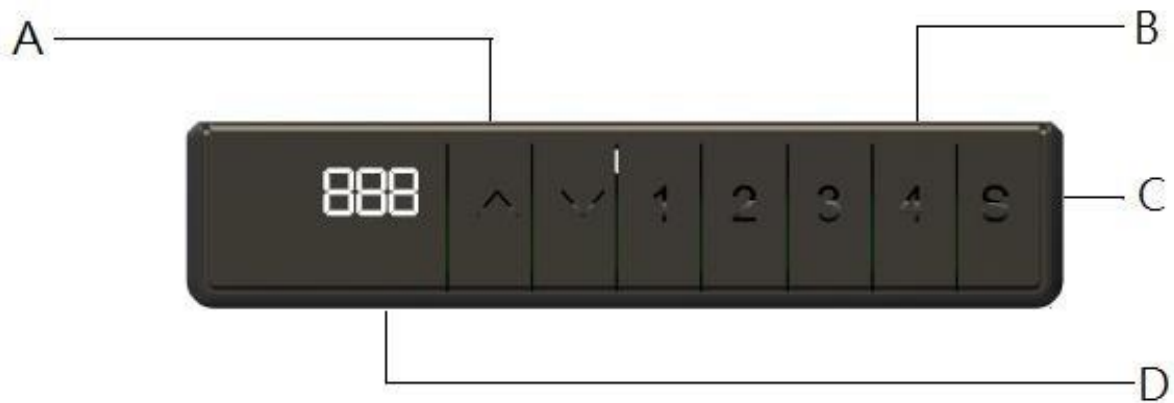

- A. Height Adjustment Buttons
- B. Memory Position Buttons
- C. Memory Setting Button
- D. Digital Display

Power Saving Function - Waking up the Control

- When no button has been pressed for 10 seconds, display goes off. Press any button to light up the display again.
- When no button has been pressed for 30 seconds, the system goes to <0.1W standby mode. Long press any button to wake the system up. Display shows desk height again.



Adjusting the Height

- Press ▲ or ▼ to adjust the height.



Reset

- Simultaneously press ▲ and ▼ for 3 seconds. Continue pressing the buttons until both columns are in lowest position. When finish reset, the control box makes a beep and the buttons can be released.



 
- When conducting reset, the display shows “000” in last 100mm stroke. When finish reset, the display shows starting height again.
- If releasing ▲ and ▼ buttons before the display shows “000”, the desk goes back to normal operation. If releasing ▲ and ▼ buttons after the display shows “000”, the user has to finish the reset to go back to normal operation.



- Reset is necessary at first operation of the desk and when the desk legs aren't moving synchronously.

Presetting the Desk Starting Height

- The default starting height is 65cm.
- To adjust the starting height, press ▼ button to go to the lowest position of the desk. At the lowest position, continue pressing ▼ button for 5 seconds, display stars flashing for 10 seconds (enter the setting mode)

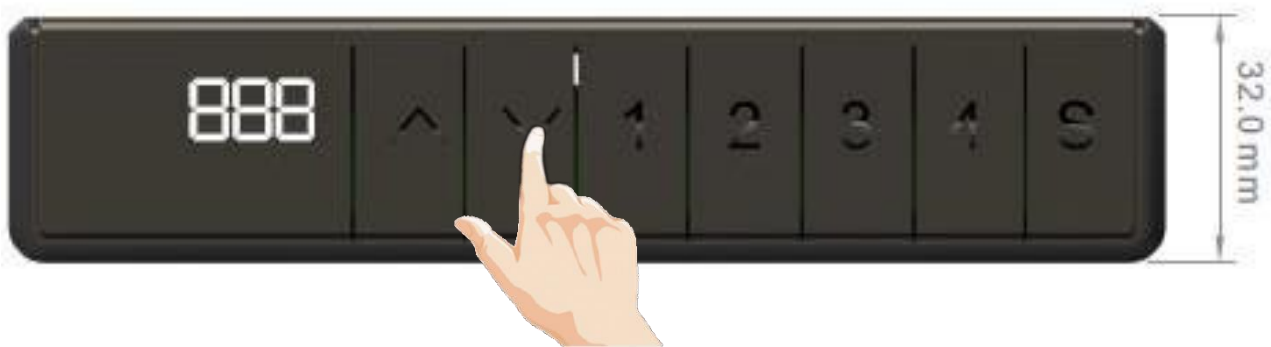

- During the 10 seconds, press ▲ or ▼ buttons to adjust the starting height to the desired height. After 10 seconds, the display stops flashing and the preferred starting height is shown and has been stored.

Memorize position

- ① Adjust the desk to the desired height, then press “S” for 3-5 seconds. The digital display will flash for 5 seconds.



- ② Press **1** or **2** or **3** or **4** to assign the desk's position to the respective button.

***Note:** If you don't finish this procedure within 5 seconds, the TDH6 will logout memory setting mode automatically.

- ③ Press and hold button 1 or 2 or 3 or 4 to move the desk to memory position.



- Stored position can only be overwritten, not to be cleared.